
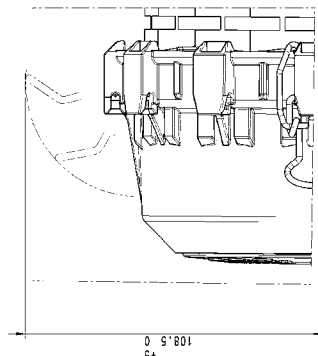


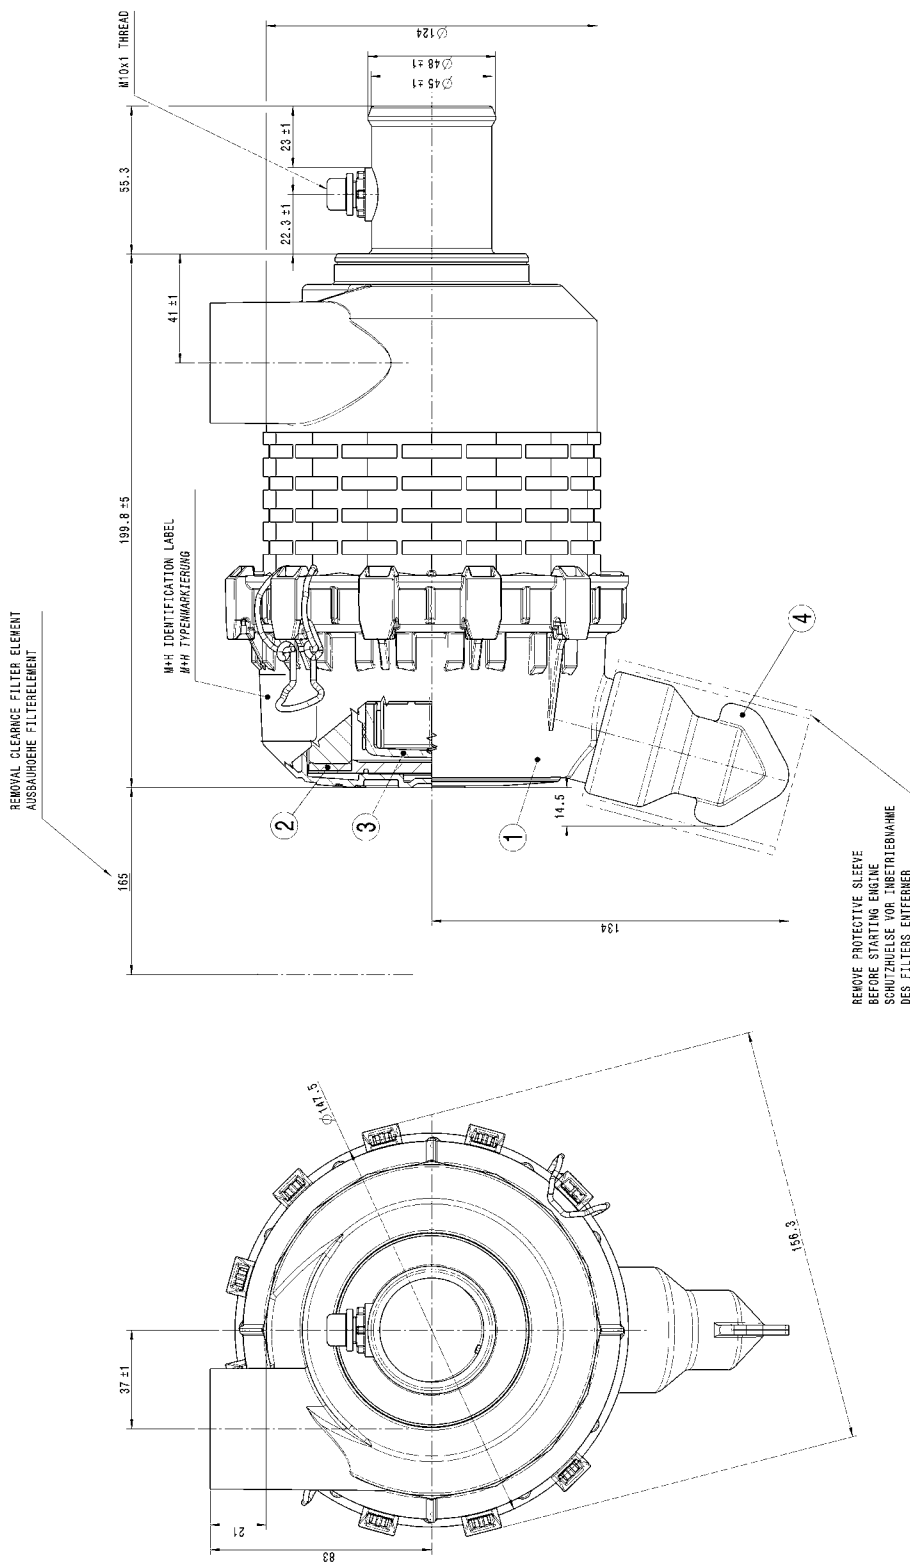

NOTES/NOTIZEN:
UNIT FOR STANDING AND LAYING INSTALLATION
DUST VALVE SHOULD BE ORIENTATED DOWNWARD AFTER INSTALLATION
GERÄT FÜR STEHENDEN UND LIEGENDEN EINBAU
STAUB-AUSTRAGSÖFFNUNG UNTER

4	DUST DISCHARGE VALVE STANDARD ELEMENT	35 000 40 339
3	SECONDARY ELEMENT SECONDARY ELEMENT	CF 50
2	FILTER ELEMENT FILTER ELEMENT	C 10 050
1	HOUSING BOTTOM COMPLETE HOUSING P-TEIL 151	45 050 17 909
PIS.	SIRE RECORD	LIST NO. RECORD

[illegible]